## PROGRAMMING via USB or BLUETOOTH from PC, Tablet or Mobile


**USB** Requires USB cable and USB plugin module on 3GEasy socket. Connect to Desktop or Laptop PC and open a windows terminal application (**TeraTerm** recommended see technical for setup)

**BLUETOOTH** Requires BlueTooth plugin module on 3GEasy socket **Open a windows terminal application** on PC or Laptop (**TeraTerm** recommended see technical for setup).

For Mobile or Tablet install a Bluetooth terminal program (*Bluetooth Terminal HC05 Application recommended*)

Lower parts below "Security Access" of menu are only displayed using the access/recovery security code.

The Initial code is 123456 once Mobile ownership is established by initial pairing this code should be changed and recorded in a safe place

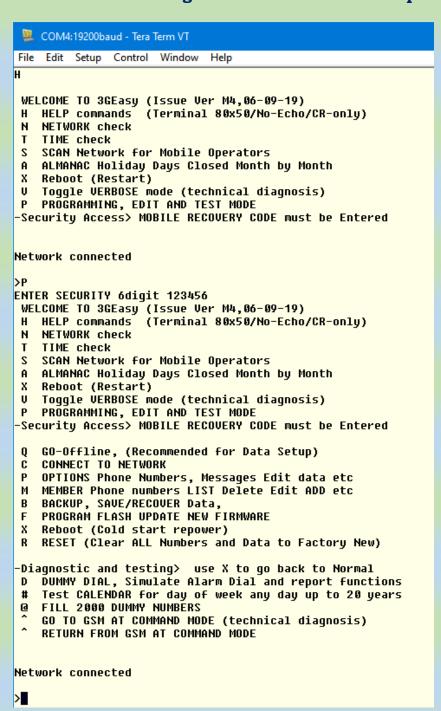

## Enter P for then space barfor program options to be displayed

```
COM4:19200baud - Tera Term VT
File Edit Setup Control Window
PROGAM SETUP and NUMBERS or EDIT
-- Press E to EDIT or Press SPACE BAR -- To VIEW >
MASTER PHONE NUMBER
                                  [61413005427]
MOBILE RECOVERY CODE
                                  [123456]
                                  [-----]
ENTRY CODE (temporary entry)
ADDRESS-(75 max char) /=newline
[14 NORLYN AUE /BALLINA/NSW 2478]
 ~~INPUT1 Triggers (Terminated/Break/Loop)
TRIGGER Type
                             T/B/L[L]
INPUT delay
                              secs[01]
SECTOR/ALARM
                               S/A[S]
RESTORE REPORT
                               Y/N[N]
                                  [61413005427]
ALARM1 CALL
ALARM1 MESSAGE- (20 max char)
                                  [INPUT1 TRIGGER]
 ~~~INPUT2 Triqqers (Terminated/Break/Loop)
                             T/B/L[L]
TRIGGER Type
INPUT delay
                              secs[01]
SECTOR/ALARM
                               S/A[S]
RESTORE REPORT
                               Y/N[N]
ALARM2 CALL
                                 [61413005427]
ALARM2 MESSAGE- (20 max char)
                                [INPUT2 TRIGGER]
 ~INPUT3 Triggers (Terminated/Break/Loop)
TRIGGER Type
                             T/B/L[L]
INPUT delay
                              secs[01]
SECTOR/KEYSW
                               S/K[K]
RESTORE REPORT
                               Y/N[N]
ALARM3 CALL
                                  [61413005427]
                                  [INPUT3 TRIGGER]
ALARM3 MESSAGE- (20 max char)
 ~~~INPUT4 Triggers (Terminated/Break/Loop)
TRIGGER Type
                             T/B/L[L]
INPUT delay
                              secs[01]
                               S/P[P]
SECTOR-EMERG/PHONE
RESTORE REPORT
                               Y/N[N]
                                  [61413005427]
ALARM4 CALL
ALARM4 MESSAGE- (20 max char)
                                  [INPUT4 TRIGGER]
 ***RELAY OUTPUTS
LATCH Pulse 1to9 secs, 0=ON
RELAY1 HOLD 0=LOCK 1-9 Minutes 1[0]
RELAY2 HOLD 0=LOCK 1-9 Minutes 1[0]
OPERATE ALARM RELAY 2
                               Y/N[N]
 ~~ACCESS OPTIONS
LINK OPEN/CLOSE TO RELAY 1
                               Y/N[N]
OPEN ON 3 RINGS
                               Y/N[N]
ANSWER INCALL SPEAKER ON
                               Y/N[Y]
KEYSWITH ALAM FUNCTION
                               Y/N[Y]
ACCESS DAYS S-M-T-W-T-F-S YYYYYYY[YŸYYYYN]
ENTRY HOURS
                       xxxx-xxxx [0845-1700]
 THE TERED CALL OPTIONS
NEW MEMBER CONFIRM
                               Y/N[N]
MULTIPLE CALL ENABLE
                               Y/N[N]
VOICE SELECT PHONE/SPEAKER
                               P/S[Y]
POWER FAIL REPORT 0=off x10secs [0]
POWER BACK REPORT 0=off x10secs
                                  [0]
OPEN REPORT ID (not master)
                               Y/N[N]
KEY ENTRY REPORT
                               Y/N[Y]
KEY LOCKUP REPORT
                               Y/N[N]
LIMIT CALLS 3 x 1-9 (max27)
                                 2[2]
MISC OPTIONS [0]
>
```


Enter P then E for edit to program contact numbers and default options.

Terminal menu assists easy programming step by step with template entries and smart

Data entry can only go into square bracketed space [xxxx] and only accepted characters or numbers will be allowed to enter.

If already programmed or default option are acceptable press enter to skip to next item

After last item is reached the list will be displayed with any changes and the question will be asked **Save Y/N** If Y is entered then changes will be saved

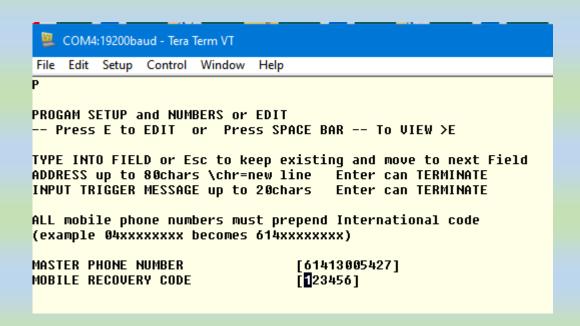

## TO VIEW/ENTER/EDIT/DELETE MEMBER PHONE NUMBERS LIST

From Menu type M

```
Q GO-Offline, (Recommended for Data Setup)
C CONNECT TO NETWORK
```

P OPTIONS Phone Numbers, Messages Edit data etc

M MEMBER Phone numbers LIST Delete Edit ADD etc

B BACKUP, SAVE/RECOVER Data,

F PROGRAM FLASH UPDATE NEW FIRMWARE

X Reboot (Cold start repower)

R RESET (Clear ALL Numbers and Data to Factory New)

Member list instruction will appear

Press space bar to display all members page at a time

To Add press A and the next available free space will be found

Press E to edit a member and enter ID number, deleting process will be checked by Y/N.

```
COM4:19200baud - Tera Term VT
File Edit Setup Control Window Help
Network connected
>М
MEMBER LIST-for ALL Press Space
For page selection Type P
For Add new Member
                    Type A
For Edit or Delete   Type E
list=Space, P,A,E
Page Blocks 42 members PAGES 1-to-48
                                         (max 2016 members)
PRESS Any Key next block OR Esc to Quit)
~~~MEMBER PHONE NUMBERS
  Press SPACEBAR for NEXT PAGE---any key Escapes PAGE-{01}
         MEMBER NUMB
                       MOBILE NUMB
                         0001- [614----01]
                         0002- [614----02]
                         0003- [614----03]
                         0004- [614-----04]
                         0005- [614----05]
                         0006- [614-----06]
                         0007- [614-----07]
                         0008- [614-----08]
                         0009- [614----09]
                         0010- [614----10]
                         0011- [614-----11]
                         0012- [614----12]
                         0013- [614----13]
```

See EASY PROGRAMMING BY UPLOADING DATA SHEET (by text file in notepad)