

## 3GEasy SMS GPRS MOBILE DIALLER SECURITY MODULE & FREE ACCESS CONTROL



4 Inputs 2 Outputs

Case

### QUICKSTART THE 3GEASY MODULE

Starting at factory Initial setup with a activated SIM card, the module is powered up and Red led flashes, then Flashing Orange led is attempting connections. Wait 10 seconds for the GREEN Led to flash (at 3 secs) to indicates logged on to the mobile network provider. Then your **Master mobile phone** should be ready for use.

**ORANGE LED** short flashes while trying to **connect** to network up to 30 seconds to connect else Sim not activated or no network found.

**RED LED** long 5 sec flash for **error** or not acceptable  
Or steady for not connected to SIM5126 module

**GREEN LED** short flash each 3 secs **Network connected OK**

**BLUE LED** fast flashes for 10 seconds on **accepted** commands.

### STARTUP COMMAND

If the Sim is activated, then upon plugging in the charger the Green led should start to flash every 2 seconds if successfully connected.

The **first** mobile incoming call is registered as the MASTER, when the message **START** is accepted on a **new** or **factory reset** Unit; Also known as **PAIRING**. The Master phone number is automatically set for Input1 and Input2 Alarm Trigger reports.

*Your 3GEasy is now operational and able to immediately,*

**(1) Operate Access relays,**

**(2) Report Alarms,**

**(3) Send Test calls upon SMS Test request.**

See **“PROGRAMMING COMMANDS LIST USING SMS SETUP”** for Message and Address Programming by SMS and other options.

End > 14/10/19